



SLUMPED MULTI PENDANT - INSTALLATION INSTRUCTIONS

**INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN!
PLEASE HANDLE ALL METAL AND GLASS COMPONENTS WITH THE
UTMOST CARE AND CAUTION TO PREVENT SCRATCHING, FINGERPRINTING
AND BREAKAGE. THE USE OF LATEX OR NITRILE GLOVES IS HIGHLY RECOMMENDED!**

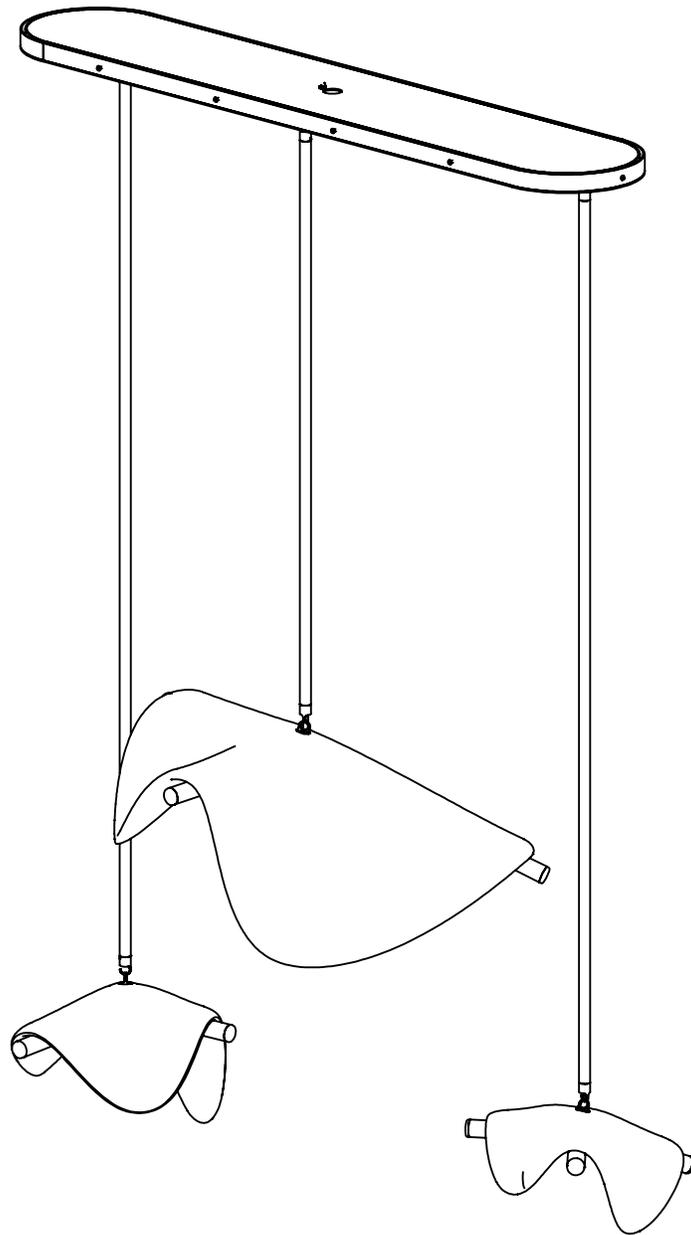


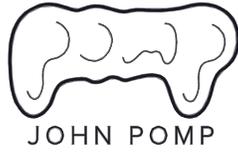


JOHN POMP

SLUMPED MULTI PENDANT - INSTALLATION INSTRUCTIONS


PACKING LIST

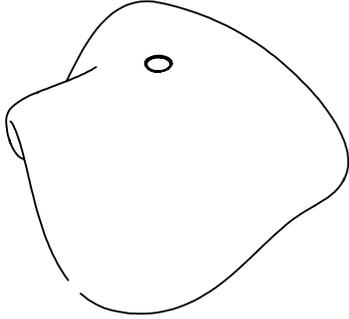


GLASS WITH BUSHING
(QUANTITY VARIES)

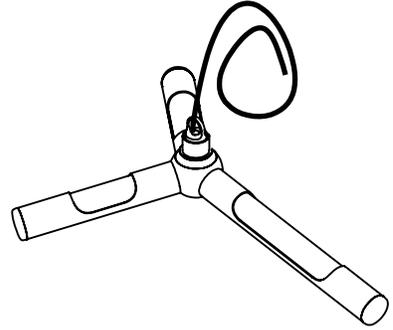

FIXTURE BODY
WITH WIRE
(QUANTITY
VARIES)




STEM ASSEMBLY
(QUANTITY VARIES)

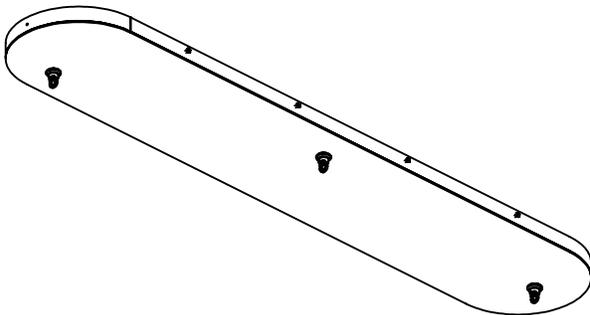

CANOPY AND PAN ASSEMBLY
(DRIVERS INCLUDED)




SLIP RING
(QUANTITY VARIES)

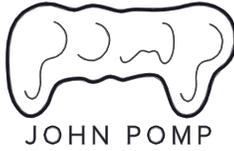


JOHN POMP

SLUMPED MULTI PENDANT - INSTALLATION INSTRUCTIONS

- 1) BACK OUT CANOPY SCREW TO DETACH CEILING PAN FROM CANOPY. ANCHOR CEILING PAN TO STRUCTURAL MEMBER IN CEILING TO SAFELY SUPPORT WEIGHT OF FIXTURES. (REFERENCE APPROVED DESIGN DRAWING FOR ESTIMATED WEIGHT). CEILING PAN MUST BE DRILLED ACCORDING TO CEILING JOISTS OF STRUCTURAL MEMBERS. APPROPRIATE FASTENERS TO BE SUPPLIED BY CONTRACTOR. TAKE NOTE OF ORIENTATION: CANOPY IS NOT SYMMETRICAL.
- 2) ORIENT HOLES IN CANOPY TO MATCH HANG STRAIGHTS ON PAN AND LIFT THE CANOPY TO ATTACH THE CARABINERS AND LANYARD FROM CANOPY TO THE PAN.
- 3) NOTE THE LABEL ON EACH GLASS, STEM, AND FIXTURE. PLACE LABELED GLASS ON CORRESPONDING FIXTURE BODY AND RUN WIRES THROUGH THE BUSHING IN THE GLASS AND STEM. HOOK STEM ON FIXTURE BODY LOOP. RUN WIRES THROUGH SLIP RING WITH ITS SHOULDER TOWARD THE FIXTURE BODY.

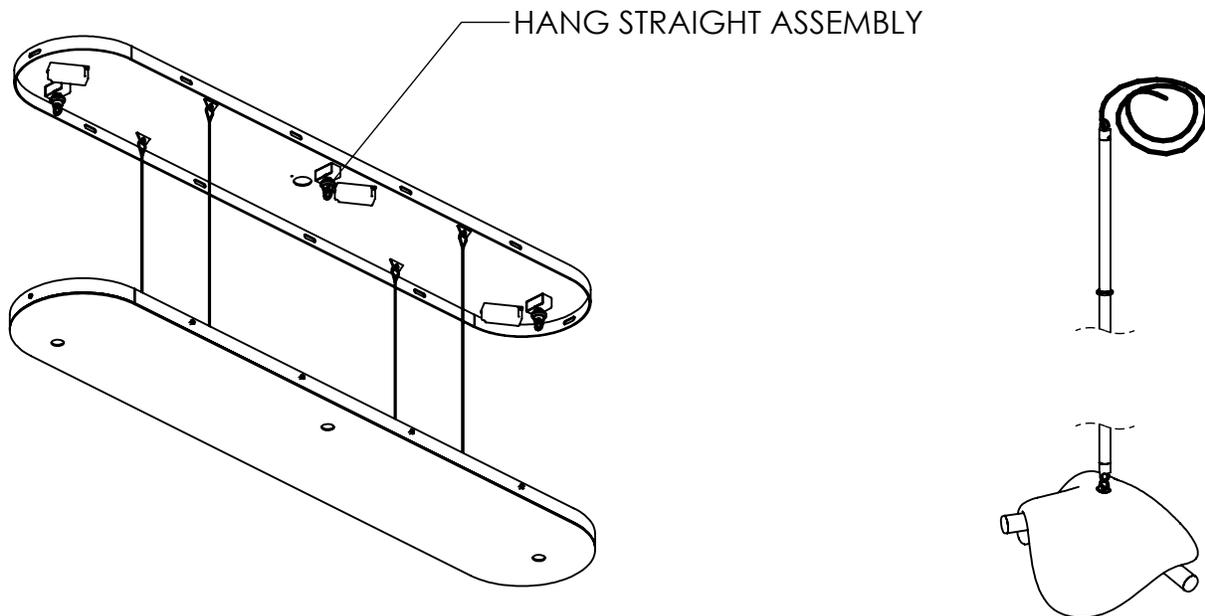

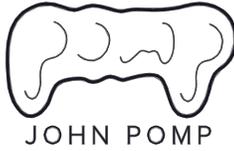


JOHN POMP

SLUMPED MULTI PENDANT - INSTALLATION INSTRUCTIONS

5) ADD SLIP RING TO STEM AND LIFT A FIXTURE BODY, GLASS, STEM, AND SLIP RING ASSEMBLY TO THE MARKED HOLE ON THE CANOPY. FEED WIRE FROM STEM, THROUGH CANOPY, THROUGH HANG STRAIGHT AND ATTACH HOOK TO HANG STRAIGHT. REPEAT FOR ALL DROPS. BE CAREFUL TO NOT SCRATCH STEMS.

6) MAKE ELECTRICAL CONNECTION FROM FIXTURES TO DRIVERS, THE DRIVERS TO BUILDING ELECTRIC REPEAT FOR ALL DROPS.

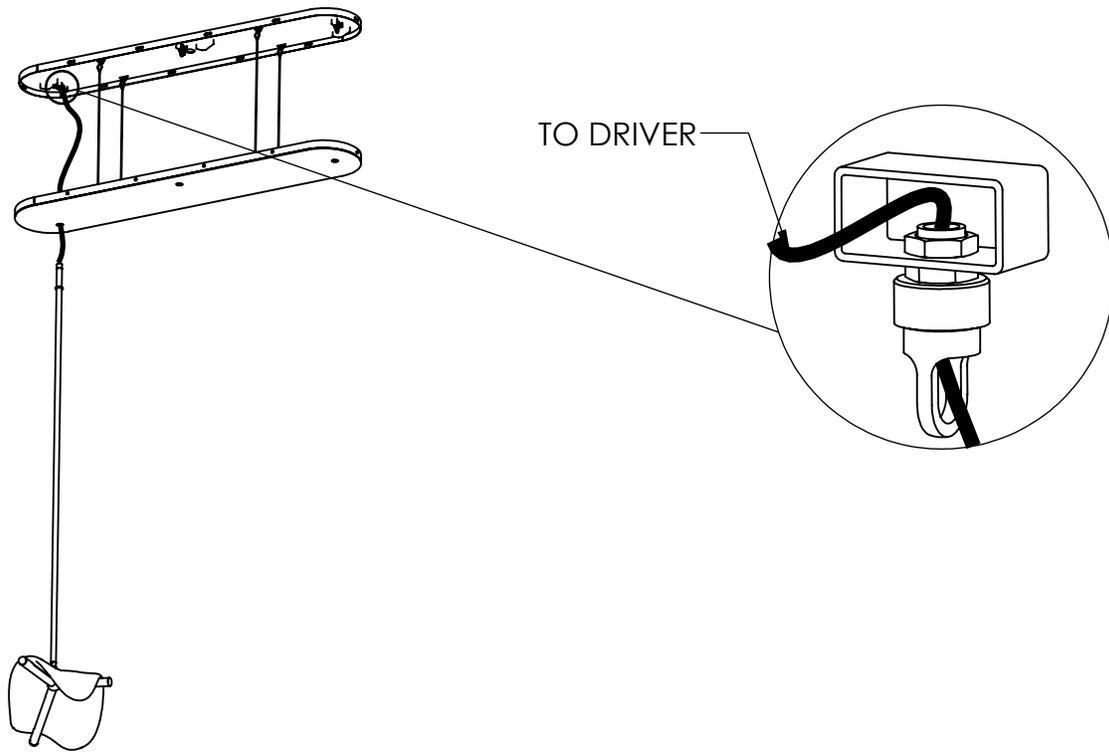

7) ONCE ALL DROPS ARE CONNECTED, LIFT THE CANOPY AND SECURE IT TO THE PAN WITH PROVIDED SCREWS. BEING CAREFUL NOT TO SCRATCH THE STEM, TIGHTEN SLIP RING TO HANG STRAIGHT. INSTALLATION IS COMPLETE.